

iluminar

Interface Cable

Interface Cable

- Interface cable for IR and WL illuminators
- Provides photocell following contact & remote telemetry input

